


CARC Injector Valve Oil Cup Lubricator CARC Cup Holder & Bracket


New Design permits easy access for valve lubrication and valve maintenance

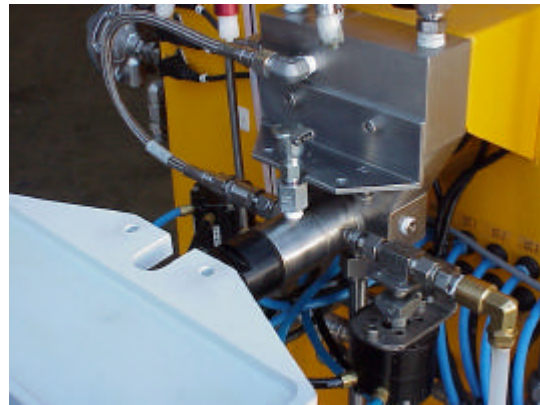

Remove old Cup Holder and mounting Bracket
Reorient injector valve oil port to the vertical position (Valve must be disassembled).



Install new Cup Holder (003-CH-PP-029) and Cup Holder Bracket (003-CB-AL-030). Mount new Oil Cup (005-PR-OC-254). Slotted Cup Holder can be easily removed for convenient access to service injector valve.

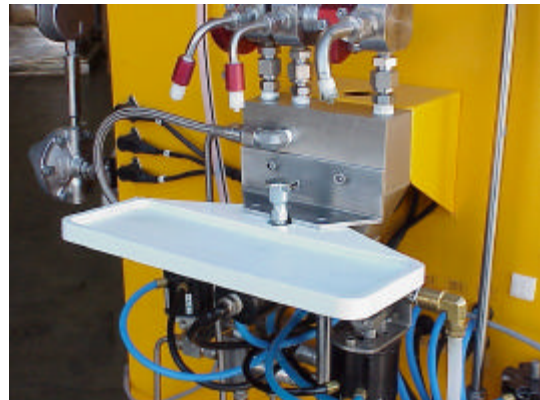

New Oil Cup location provides more convenient access for regular lubrication of the catalyst injector valve.